



Your Sounds Easy™ kit includes:

- The Sounds Easy recorder
- 3 AAA batteries (inserted in the recorder)
- One 30 message Memories Card™
- Two sets of number stickers
- A carrying pouch

Understanding your Sounds Easy recorder



Inserting your Memories Card™

1. Turn off your Sounds Easy recorder.
2. With the metal contacts facing up, push the Memories Card into the slot on the side of the recorder.



Please don't forget to turn off your Sounds Easy recorder before inserting or removing a Memories Card.

To remove your Memories Card, turn off the recorder and pull the card out of the slot.

Please note:

The metal contacts of Sounds Easy Memories Cards have a protective anti-oxidant coating to insure that your messages will last a lifetime. However, if a Memories Card has not been used for a while, your Sounds Easy recorder may not at first respond to the PLAY or RECORD buttons. Simply remove the card and firmly re-insert it once or twice to restore proper connection between the card and your Sounds Easy recorder.

How to Use Sounds Easy

To make a recording:

1. Press and release the red REC button. The recorder will say, "Next Message" and a number. The message you are about to record will be assigned this number.
2. Press and hold the red REC button. When the red LED light turns on, the recording begins. Hold the recorder close to your mouth and record your message for up to 30 seconds. Release the button if your message is less than 30 seconds. The red LED light will blink during the last 4 seconds of the recording time.
3. To review your message right away, press and release the green PLAY button.

To re-record a message:

If you're not happy with your recording, you can record the message again.

1. Press and release the red REC button. After the recorder says, "Next Message" and a number, use the keypad to enter the 2 digit number of the message (01, 02, 03, ...) you want to record again. The recorder will say the number and "Recorded" just to remind you that you have already made a recording.
2. Press and hold the red REC button and record your message when the red LED light turns on.

To Play a Message:

1. Press and release the green PLAY button.
2. Using the keypad, press the two digit number of the message (01, 02, 03...) you wish to hear. The recorder will say the number of the message and then play the message.


Connecting your recordings to objects

Simply add the number of the recording to the photo or object to which it pertains. You can use the number stickers included with your Sounds Easy kit or write the number with a pen.



Locking your Memories Card

Each Memories Card includes a Memory Lock tab. Slide the tab to the locked position to prevent recordings from being made. Slide the tab to the unlocked position to allow recordings.

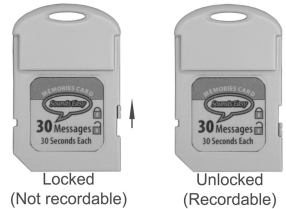

Changing the batteries

The batteries that came with your Sounds Easy recorder will last for 100's of record and play cycles. When the batteries become too low to operate, you will hear 2 short beeps when the Record button or the Play button is pressed. To change the 3 AAA batteries, locate the battery door on rear of recorder.



Remove screw, open door, insert batteries, close door, replace screw.

Contact your local government for battery disposal or recycling practices in your area.

Scrolling through your messages

Sounds Easy lets you scroll through the messages you have recorded. Press and release the green PLAY button and enter the number of a message you have recorded. While the message is playing, press and release the PLAY button. The recorder will skip forward to the next recorded message and play that message. Press the PLAY button again to skip to the next recorded message.

Extra Features

Record lock switch: Sounds Easy includes a Record Lock switch to prevent your messages from being accidentally re-recorded. To activate, use the point of a pencil or pen to slide the Record Lock up to the locked position. If the red REC button is pressed with the Record Lock in the locked position, the recorder will say, “Record Locked” and a recording cannot be made.



Volume Control Switch: The Sounds Easy Recorder includes a 3 position volume control switch. Use this switch to adjust the volume when playing a message. This switch has no effect when recording a message.

Audible Warning Tones:

- 4 Beeps: If the recorder gives a series of 4 beeps when REC or PLAY is pressed, a Memories Card is either not inserted or not fully inserted.
- 2 Tone warning: If the recorder makes a 2 tone warning sound, either invalid key presses have been made or no message number has been selected after PLAY has been pressed.
- 2 Short Beeps: When the batteries need to be changed the recorder will give 2 short beeps when REC or PLAY is pressed.

Tips For Using Sounds Easy

- To get the best quality recordings, speak in a normal volume voice and hold the recorder close to your mouth. When recording a group of people or ambient sounds, be sure to hold the recorder with the microphone facing your subject.
- Use a dedicated Memories Card for each of your applications. For instance, use one for your prescriptions and another for your “To Do” list.
- Label your Memories Cards. Use a permanent marker to write on or to color code your Memories Cards. You can also add a tag to identify it. The Memories Card has a loop which can be used to attach the tag.
- The Sounds Easy recorder is small enough to carry in a pocket or purse but, for additional convenience, a lanyard can be attached to the loop in the recorder so that you can keep it around your neck.
- It’s easy to record sounds from sources like TV, radio, or computer. Just place your Sounds Easy recorder a couple of inches from the speaker set at a normal listening volume and make the recording.

Limited Warranty

What the Warranty Covers:

This warranty covers any defects in materials or workmanship of the Sounds Easy voice recorder, Memories Card and accessories.

What the Warranty Does Not Cover:

This warranty does not cover batteries or damage to the Sounds Easy voice recorder caused by battery leakage. Loss of recorded messages is not covered. Damage caused by dropping or abuse is not covered. Also, consequential and incidental damages are not covered under this warranty.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

What the Period of Coverage Is:

This warranty lasts for 90 days from the date of purchase. Any implied warranties, including those of merchantability and fitness for a particular purpose, are limited in duration to the duration of the written limited warranty.

Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

What Sounds Easy LLC Will Do to Correct Problems:

We will repair any defects in materials or workmanship. In the event repair is not possible, we will either replace this product or refund the full purchase price of the product, whichever you prefer.

How You Can Get Service:

Return the product and receipt, along with a brief explanation of the problem, to:

Sounds Easy LLC
P.O. Box 333
Reading, MA 01867

If you have questions please feel free to contact us at 1-781-944-9881 or by email at info@sounds-easy.com.

How State Law Relates to the Warranty:

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

The FCC Wants You to Know

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult Sounds Easy LLC or an experienced radio/TV technician for help.
- If you cannot eliminate the interference, the FCC requires that you stop using your recorder.

Changes or modifications not expressly approved by Sounds Easy LLC could void the user's authority to operate the equipment.

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Sounds Easy LLC
www.sounds-easy.com

Reading, MA 01867 10/2010
Custom manufactured in China for Sounds Easy LLC